

**E-Z-GO TXT Brush Guard
Installation Instructions
Black- Part# 6275
Gunmetal- Part# 7068
Stainless- Part# 6275-S**



Hardware Kit

- 5/16 x 2 1/2 Bolts-2
- 5/16 x 2 Bolts-2
- 5/16 Washers-4
- 1/2" Spacers-2
- 3/4" Spacers-2



Always wear appropriate eye protection!



Installation Instructions:

1. To make this installation easy you will need a person to hold the roof. If you have a roof on your cart, remove the bolts and spacers from the front struts of the roof and have someone hold the roof in place. If you do not have someone available use a broom handle to prop up the roof. If you have a roof you can either re-use the stock hardware or use the supplied hardware. If you do not have a roof you will need to use the complete hardware kit. The brush guard is designed to protect the factory light bar. If installing cut-in headlights, slightly oversize the holes in both mounts. This will allow you to drop the brush guard to center the lights.
2. If you do not have a top use the supplied 5/16 x 2 1/2" bolts, washers and 1/2" spacers to mount the bottom of the brush guard to the stock roof mount holes as shown in Figure 1. If you do have a top on your car use the stock bolts and washer spacers and mount the brush guard to the outside of the roof mount and to the bottom stock roof mounting holes.
3. If you do not have a top use the supplied 5/16 x 2" bolts, washers, & 3/4" spacers, mount the top of the brush guard mounts to the stock roof mount holes as shown in Figure 1. If you do have a top on your car use the stock bolts and spacers and mount the brush guard to the outside of the roof struts and to the stock roof mounting holes.
4. Securely tighten all bolts.

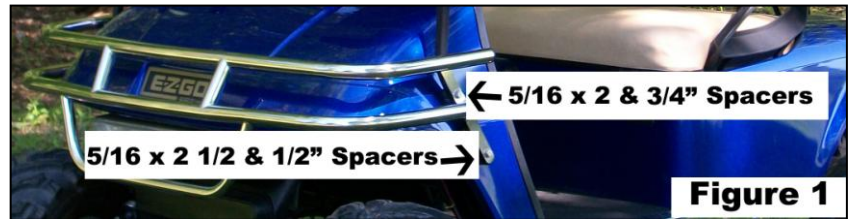


Figure 1



866-405-2537

www.jakeslifitkits.com